

Wirnet™ iFemtoCell-evolution LoRaWAN® gateway for the Internet of Things Quick Start Guide



Thank you for choosing Kerlink. We are proud to be part of your project.





1. Need help?

- In order to provide the most updated technical documentation, as well as considering and saving the environmental resources, Kerlink is providing preferably "Online documentation".
- · Kerlink is gathering all the technical information on a Wiki: http://wikikerlink.fr/
 - If you don't have yet your Wiki login/password please request them to support@kerlink.
 com (note that the "Product ID" of one of your products will be required).
 - How to find the "Product ID"? Please look at the Wirnet iFemtoCell-evolution sticker placed on the back side of the case.







- On the Wiki, Kerlink is proposing a comprehensive set of documents and information for selfhelp:
 - Setup of Wirnet™ iFemtoCell-evolution Gateway: Connection to the gateway, Firmware update, Packet Forwarder installation, Packet Forwarder configuration.
 - System Management: Connection, login and credentials, KerOS REST API, ... Network Management: Backhaul configuration, Firewall, IPsec / OpenVPN.
 - LoRa Features, KerOS customization, Support and resources (FAQ, Troubleshoot the gateway...)

- Application Notes: for questions related to generic engineering rules
 - AN-KLK03355 Improving radio coexistence performance of LoRaWAN gateways
 - AN-KLK03356 LoRaWAN gateways coverage optimization
 - AN-KLK03357 LoRaWAN gateways installation recommendations
 - AN-KLK03358 LoRaWAN gateways lightning protection
 - For any Warranty or Maintenance related request (Trouble shooting, help ...)
 - If purchased from a Distributor, please contact the distributor directly for Level1 support
 - If purchased from Kerlink directly, please open an "Assistance Request" via our ticketing tool called OTRS (Open-source Ticket Request System)
 - If you don't have yet your OTRS login/password, please request them to support@ Kerlink.com (note that the Product Id or any serial number of one of your products will be required).
 - Access to Kerlink "Technical Support team" for Maintenance Services is conditioned to a valid Maintenance contract.

For any other question related to our product, please contact our distributor or Kerlink sales@kerlink.com or + 33 2 99 12 29 00.

2 Manufacturer

Kerlink, 1 Rue Jacqueline Auriol 35235 Thorigné-Fouillard, France Tel.: +33 (0) 2 99 12 29 00 – Fax: +33 (0) 2 99 12 29 11 www.kerlink.com

3 Safety

- Please, read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, or maintain it.
- The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



- Refers to a critical situation.
- · In case of non-compliance, it may result in property damage



· Refers to useful information during manipulations.

4 Packet contents



- Only use the Wirnet™ iStation for its intended use "Normal conditions of use".
- Maintenance and repair must be carried out by qualified personnel authorized by the manufacturer.
- The enclosure of the Wirnet™ iStation must not be opened by CUSTOMER.
- The Wirnet™ iStation should only be used with accessories or spare parts supplied by your reseller



N°	Components	N°	Components
1	Wirnet™ iFemtoCell-evolution	9	SMA connector for LoRa antenna
2	Silkscreened KERLINK marking	10	Reset push button
3	Jack connector (for power supply 12Vdc 0,5A)	11	Silkscreened Reset marking
4	USB-A connector for configuration	12	USIM connector
5	RJ45 connector (Ethernet)	13	USB-C connector for debug probe and for configuration
6	3 bicolor LEDs	14	LoRa antenna (862-873MHz, 902-928MHZ, 3dBi, 50Ω; vertical polarization)
7	Wall mounting oblong holes	15	AC/DC power supply (not provided)
8	Sticker with markings	16	Quick Start Guide (this document)

5 Markings

Symbol	Description	Symbol	Description
Wirnet iFemtoCell-evolution	Type of equipment		QR Code
12V = = 0,5mA	Power supply information	C E	CE marking indicating that the product complies with current European directives or other marking marking depending on the country
Board ID	Serial number of board	ROHS	Marking indicating that the product complies with RoHS directives
Final product ID	Serial number of product	A	Do not dispose of with domestic waste
MAC ADDR MAC address			Product must be installed on a non-
EUI	Extended Unique Identifier	1	flammable substrate (UL94V0). Refer to the installation instructions Refer to the installation instructions before powering up
IP 30	Indice of protection		

6 Installation of Wirnet™ iFemtoCell-evolution 6.1 Mounting of the enclosure



The Wirnet™ iFemtoCell-evolution enclosure must be mounted on any concrete pedestal, concrete wall or any non-flammable surface (UL94-V0).

It must not be mounted on a flammable surface.

The Wirnet $^{\mbox{\scriptsize M}}$ iFemtoCell-evolution may be mounted on a wall using the two oblong holes.

Only two screws (not included) are needed, all mounting information is mentioned on the following drawing.



6.2 Setting connections



Before setting all connections, ensure that the power supply is not connected to the mains supply.

An external LoRa antenna is connected to SMA or RP SMA connector. A 4G/3G antenna is integrated.

Once the Wirnet[™] iFemtoCell-evolution is installed, you can select up to 2 technologies to access to Internet for the data backhaul:

- Ethernet connection, requiring an Ethernet access through a dedicated RJ45 cable (not included)
- 4G/3G cellular connection, requiring an USIM (not included) and a data subscription (not included)

Note that both configurations can be used in parallel. For example, RJ45 Ethernet with a 4G/3G link as a backup.



Ethernet cable, power supply and LoRa antenna connections



USINI Card Inserted

Once the LoRa RF antenna, the Ethernet cable (if used) or the optional 4G/3G (with USIM card inserted) and the power supply jack connector are plugged, the Wirnet™ iFemtoCell-evolution can be powered ON by connecting the power supply.

The Ethernet cable is not provided and must consist of two RJ45 T 568A (or 568B) plugs on each side.

KERLINK recommends using a cable with the following characteristics:

· Category: 6A

• Shielding: STP (U/FTP) or SSTP (S/FTP)



Section conductors: AWG26
 External jacket: LSZH or PUR
 Maximum length: 100 meters

The power supply jack connector supply is not provided. Please check accessories preconized by Kerlink

Operating temperature range: -20°C to +55°C

Humidity: 5% to 95% Altitude max. < 2000m

6.3 First connection

LED	Specification			
LED 1: Power/ Status	A solid Green for Power LED A Status Red LED			
	Gateway Status	"Status LED" Behaviour		
	Boot part 1	Fix on		
	Boot part 2	Heartbeat		
	Boot part 3	Blink every second		
	Run time	Off		
	Power down sequence	Heartbeat		
	Update	Blink / 0.4 second		
	Restore backup	Blink / 2 seconds		
	Restore stock	Blink / 4 seconds		
LED 2: Backhaul	RED during boot If the applicative software provided by Kerlink is installed: RED If applicative software is disconnected GREEN blinking during applicative software connection GREEN fix if applicative software is connected			
LED 3: LoRa Data RED during boot If the applicative software provided by Kerlink is installed: • Applicative software management • Rx: GREEN blinking • Tx: RED blinking		. ,		





Applicative software stands for embedded software running on the Wirnet[™] iFemtoCell-evolution like KERLINK Small Private Network or another Packet Forwarder (software that forwards LoRa packets received to a server and emits LoRa packets that are sent by the server).

Please contact your reseller to know the LEDs behavior if the applicative software installed on the Wirnet™ iFemtoCell-evolution is not the one officially provided by KERLINK.

The Reset On / Off button must be pressed during 1s to generate a software reset of the product. A long press for 5s turns off the gateway. Another short press turns on the gateway. To press the buttons, a tool with a 1mm diameter must be used.

For more information on the « Quick start of Wirnet™ iFemtoCell-evolution Gateway, please consult the Kerlink Wiki:

http://wikikerlink.fr/wirnet-productline/doku.php?id=playground:quickstart:quickstart_ifevo

7 Declaration of Conformity

7.1 Wirnet™ iFemtoCell-evolution 868

Simplified EU Declaration of Conformity

Hereby, Kerlink, declares that the radio equipment type Wirnet™ iFemtoCell-evolution 868 is in compliance with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet address: www.kerlink.com/support

In Europe, the Wirnet™ iFemtoCell-evolution 868 station must comply with the ERC 70-03 requirements regarding duty cycle and maximum EIRP. They are summarized in the following table

ERC 70-03	Frequency (MHz)	Power	Duty Cycle
h5.0	865-868	14dBm ERP	1%
h6	868-868,6	14dBm ERP	1%
h8	869,4-869,65	27dBm ERP	10%



The power supply of the Wirnet[™] iFemtoCell-evolution 868 must be a limited source of power. Note that: If the LoRa antenna is changed, the output power must be adjusted to take into account the gain of the antenna in order to not overrule the ERC 70-03 recommandation.

Some countries in Europe may have specific frequency ranges, EIRP and duty cycles regulations. Check the local regulations before installing and commissioning the Wirnet™ iFemtoCell-evolution 868.

For other countries, outside Europe, check the frequency range, the maximum EIRP and duty cycle allowed.

7.2 Wirnet™ iFemtoCell-evolution 915

The Wirnet™ iFemtoCell-evolution 915 will be compliant with both FCC and IC regulations The associated FCC and IC identifiers of the Wirnet™ iFemtoCell-evolution 915 are:

Model: Wirnet™ iFemtoCell-evolution 915 Model: EG25G

FCC ID: 2AFYS-KLKFEVO915 Contains FCC ID: XMR201903EG25G IC: 20637-KLKFEVO915 Contient IC: 10224A-201903EG25G

The power supply of the Wirnet™ iFemtoCell-evolution 915 must be a limited source of power. Note that: Any change or modification of this equipment not expressly authorized by Kerlink may cause, interference and void the FCC authorization to operate this equipment.

This device complies with Industry Canada's license-exempt RSSs.

Operation is subject to the following two conditions:

This device may not cause harmful interference, and



Some conditions have to be respected to maintain the FCC and IC compliance of the devices in the USA and Canada. Please contact your reseller to have details.

For other countries, check the specific regulations regarding maximum EIRP and duty cycle allowed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This equipment complies with RSS102's and FCC radiation exposure limits set forth for an uncontrolled environment under the following conditions:

- 1. This equipment should be installed and operated such that a minimum separation distance of 20cm is maintained between the radiator (antenna) and user's/nearby person's body at all times.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'expositions de la CNR102 applicables pour un environnement non contrôlé aux conditions suivantes:

- Cet équipement devra être installé et fonctionner de telle manière qu'une distance minimale de séparation de 20 cm soit maintenue entre la partie rayonnante (l'antenne) et l'utilisateur / les personnes à oroximité à tout moment.
- 2 Cet émetteur ne doit pas être co-localisé ou opérer en conjonction avec toute autre antenne ou émetteur.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1. L'appareil ne doit pas produire de brouillage;
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

7.3 Wirnet™ iFemtoCell-evolution 923

The Wirnet™ iFemtoCell-evolution 923 will be compliant with the directive 2014/53/EU relating to radio equipment (RED) and is certified for the following countries:

Country	Label, identification and comments
Australia / New Zealand	will be compliant
Japan	will be compliant
Indonesia	will be compliant
Singapore	will be compliant

8 Disposal / recycling



Do not dispose of the product with household waste. For proper disposal, contact a waste disposal company. The product packaging (cardboard and liners) can be removed with used paper.

9 Warranty

Contact your reseller for warranty conditions of the Wirnet™ iFemtoCell-evolution.



The Wirnet™ iFemtoCell-evolution is not warranted by Kerlink in case the enclosure is opened. modified, painted, branded out, outligned by CUSTOMER for any reason. Feel free to contact us for a guideline for the branding.

10 Accessories and Professional Services

For additional information, on available accessories and Professional Services please contact your reseller

11 Give us your feedback

Your shopping and operational experiences are very important to us. We would like to invite you to leave review on our products and services. We will appreciate your time and efforts.

We would be very proud to get any photo of your gateway installation. Can you share them to dmk@kerlink.com

12 Find us in Social Media

We would like to hear from you: any tips, any news to share?



@kerlink news



Kerlink



Kerlink channel

We stay at your disposal for any help on your project. Yours sincerely.

Kerlink Team

